
LEKN(C1) Assembly Manual V2.0

2_6. AngleConnectorAssembly

Materials			
Electronic Parts	Frame Parts	Hardware Parts	Fasteners Parts
		2020 Angle-Connector *6	M5-14mm Screw*6
			M5-8mm Screw*6
			M5 Nyloc-Nut *6




[Step1] Fix Angle-Connector to the T-nuts in the x-axis with M5-8mm screw.

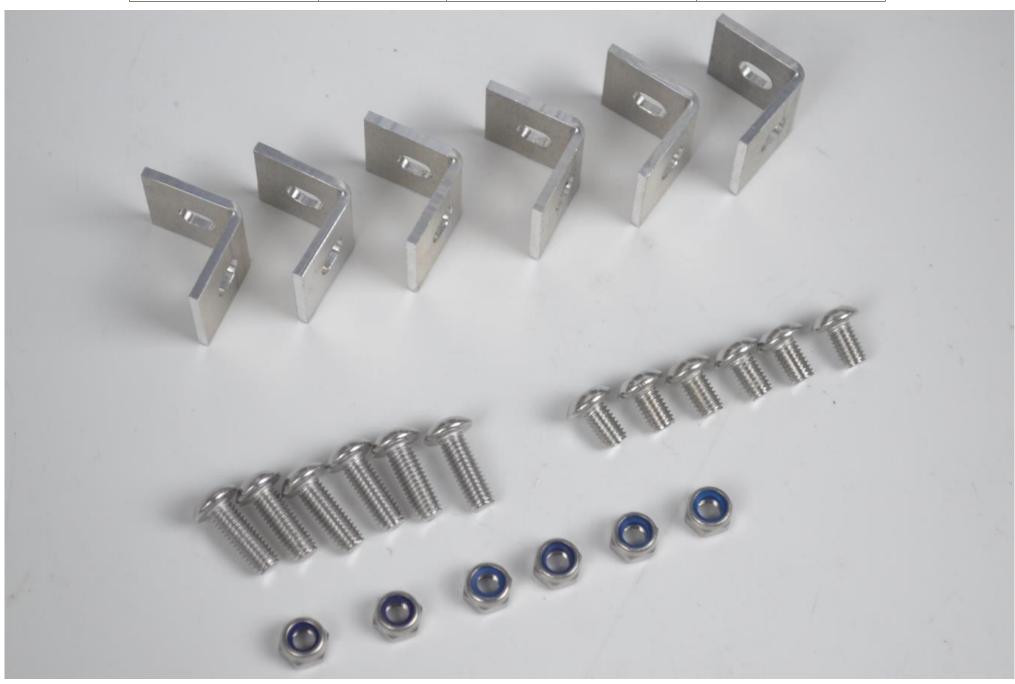

LEKN(C1) Assembly Manual V2.0

[Step2]Then use M5-14mm screw to pass through y-carriage aluminum and Angle-Connector. Secure with Nyloc-Nut.

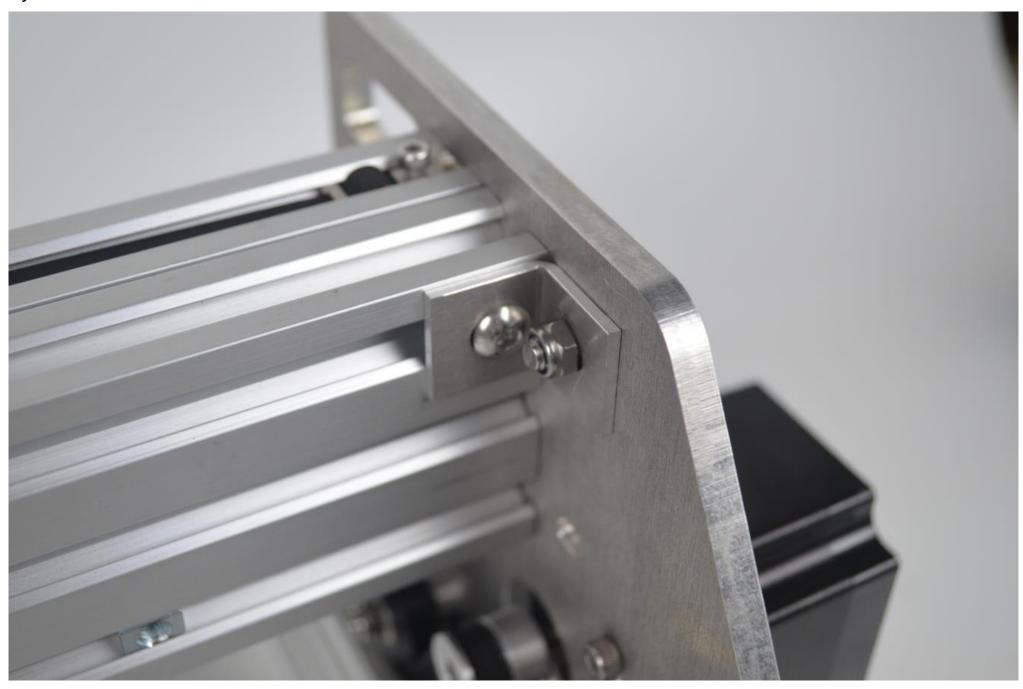

The installation method of other Angle-Connectors is the same (2 Angle-Connectors on each side of the front and 1 Angle-Connector on each side of the back of the x-axis)

